



ASSEMBLY INSTRUCTIONS

Double Deep Tasting Table Racks

WRATT1280, WRATTBB1280 - Pine
 WRATT1281, WRATTBB1281 - Redwood

Questions?
 Toll free 1-888-373-6057 or visit WineRacksAmerica.com




Thank you and CONGRATULATIONS for purchasing this quality product. Properly assembled, your racking will beautifully enhance your wine collection for many years to come. To assemble, please check to ensure all necessary parts are included and follow the assembly instructions closely. If you have any questions or problems please call customer service toll free 1-888-373-6057 Monday through Friday 7:00 am - 5:00pm MST.



Planning to stain?

For best results we recommend you stain or finish your racking BEFORE assembly.

Tools For Assembly:

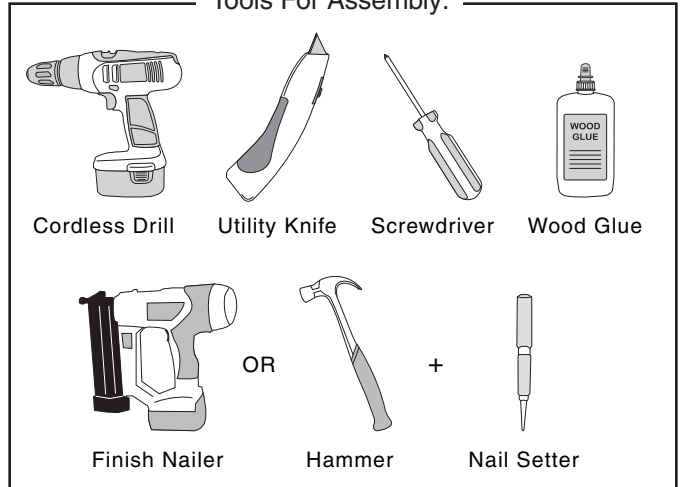


! The instructions pictured are for the WRATTBB1280 rack. Follow the same steps for all double deep Tasting Table racks.

PARTS LIST


PARTS ARE NOT TO SCALE

SIDE LADDER ASSEMBLY x 2

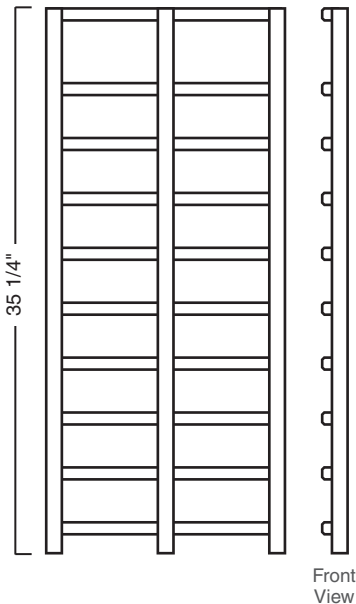


Front View

MIDDLE LADDER ASSEMBLY x 7

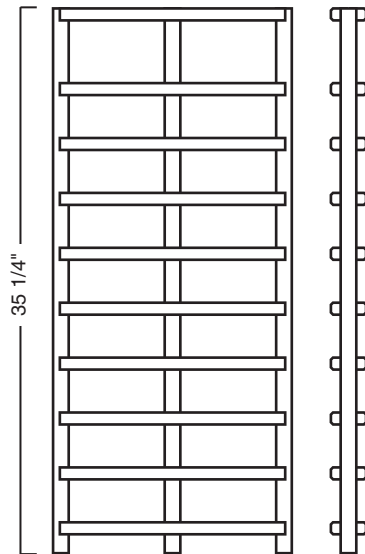


Front View


FLOOR MOLDING x 2

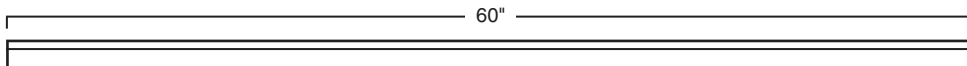


BUTCHER BLOCK TOP x 1
 (depending on model)

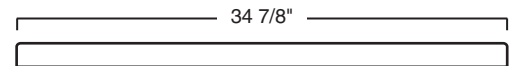

STANDARD COLUMN CONNECTORS x 2

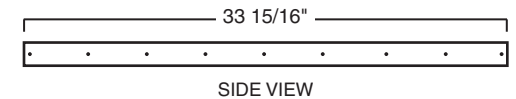


SCREWLESS COLUMN CONNECTORS x 2

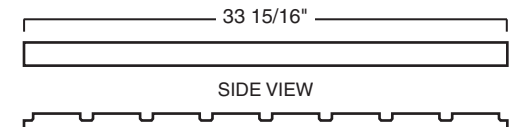

1 1/4" WOOD SCREWS x 18




FINISH NAILS x 18

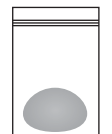

SMALL BAG OF WOOD PUTTY

1. Find an open, flat area in which to work. Carefully remove all components from the box and remove banding with a utility knife. Check the parts list to verify package contents.


2. Arrange the side ladders on the floor so that the bottle support pieces face one another. Align the tops on each side ladder. **The end with the bottle support piece flush with the ladder is the top of your rack (there is no specific front or back to this rack).** Attach a standard column connector to bottom of your rack using the 1 1/4" screws provided. Make sure the connector is flush with the bottom of your rack. (figure 1)

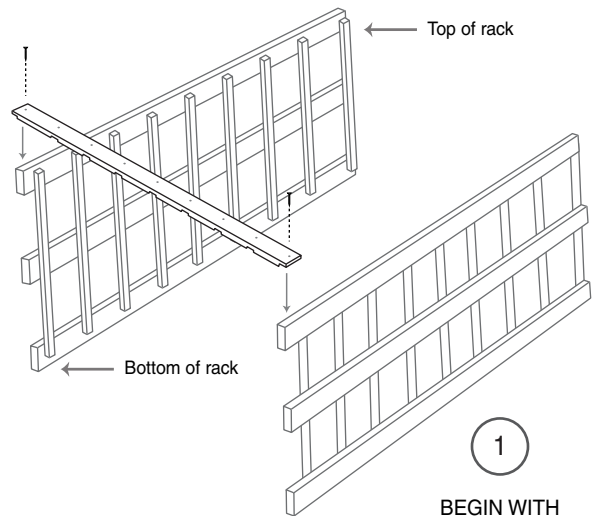

BEGIN WITH
BOTTOM OF RACK

* Minimize the risk of splitting your side ladders by drilling a 1/16" pilot hole before driving the wood screws. For best results, drive the screw most of the way in with your drill, then finish tightening by hand.

3. Insert the middle ladders and finish securing the bottom connector using the 1 1/4" screws provided. (figure 2)

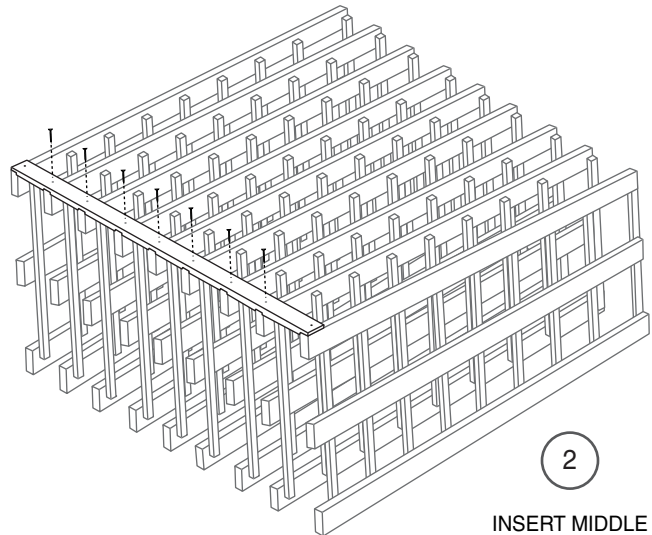


INSERT MIDDLE
LADDERS

4. Locate the horizontal connectors with no pilot holes. Apply a small amount of wood glue into each notch of the first connector. (figure 3)



APPLY WOOD GLUE TO
SCREWLESS CONNECTORS

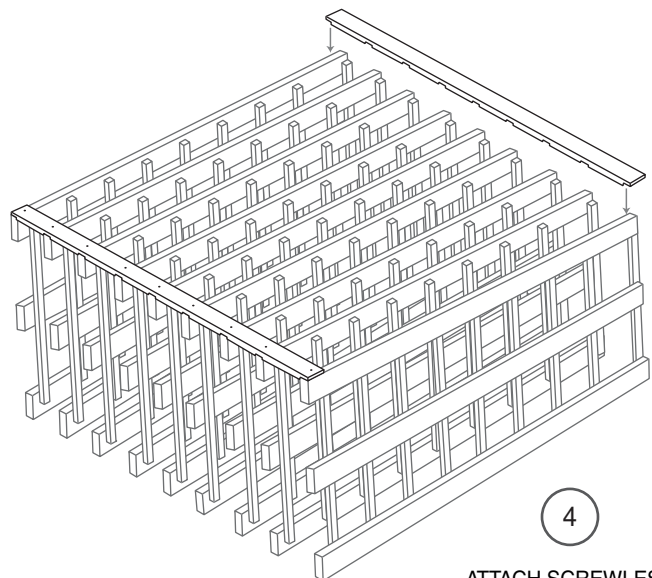


ATTACH SCREWLESS
CONNECTORS

5. Finish securing the screwless connector using a finish nail gun to drive a finish nail through the connector into each vertical ladder. Make sure the rack is flat on the floor while attaching the screwless connectors. (figure 5)

If you do not have a finish nail gun, drive one of the provided finish nails into each vertical ladder until it is flush. Then, countersink the nail using a nail setter until the head of the nail is about 1/16" below the surface of the wood.

6. Fill the nail holes using the wood putty provided. Simply push the putty into each hole using your thumb and wipe excess putty off the surface using a damp cloth.

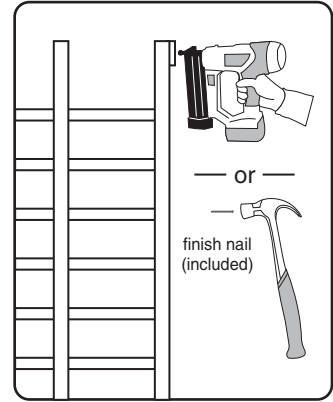


5 SECURE WITH FINISH NAILS

7. Flip rack over and repeat the same process for attaching the standard and screwless connector to the other side of the rack. (figure 6)

8. Stand the rack upright. **If you purchased a Double Deep Tasting Table Base proceed to step 10.** (figure 7)


9. Tasting Table Top

If you ordered the Double Deep Tasting Table with the butcher block top, secure it by placing a small amount of wood glue on the tops of the ladders and clamping the butcher block to the table base using standard wood clamps. Allow glue to fully dry before removing clamps. (figure 8)

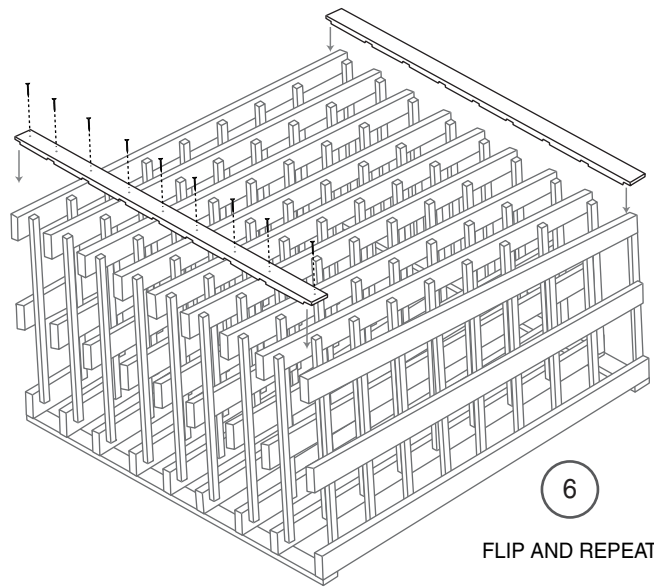


6

FLIP AND REPEAT

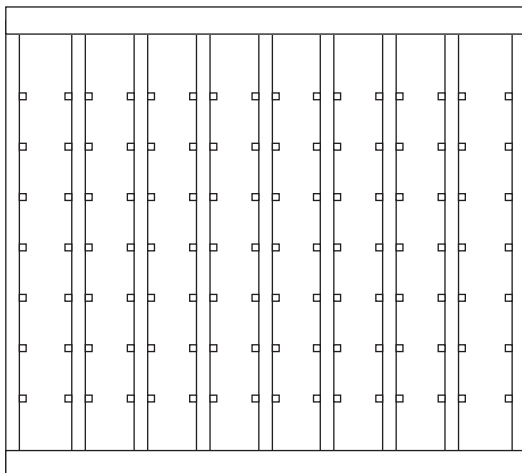

7 STAND RACK UPRIGHT

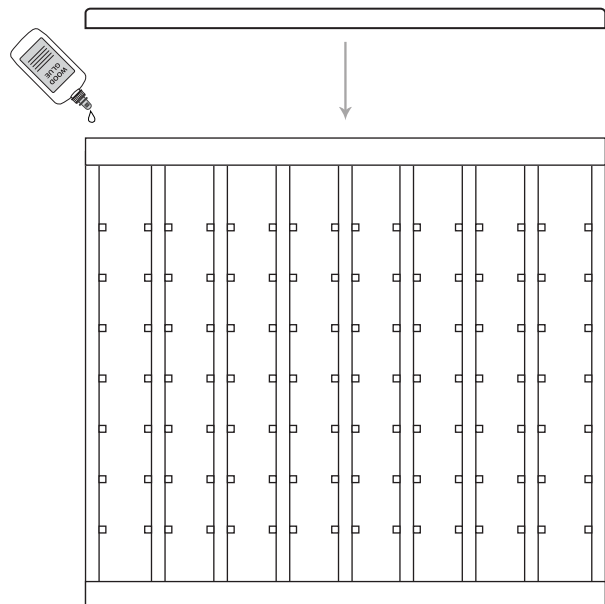

8 SECURE BUTCHER BLOCK TOP


10 . Attaching the Floor Molding

Our floor molding installs just like regular finish molding in your house. It will fit directly over the bottom horizontal connector of your rack. (figure 9)

It will be necessary to make a 45° Miter cut in the areas where the front and side molding meet. (figure 10)

11. Secure floor molding with wood glue or a small finish nail. (figure 11)

Fill the nail holes & overlap joints using the wood putty provided or any quality matching wood filler. Simply push the putty into each hole and overlap joint using your thumb or putty knife. Wipe away excess putty using a damp cloth.

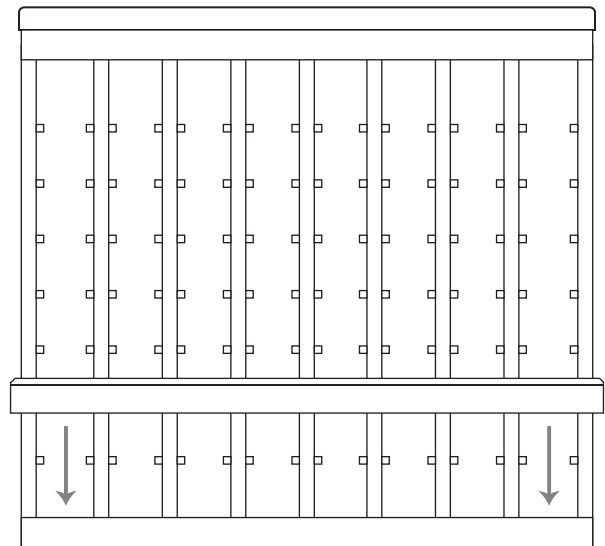


9 ATTACH FLOOR MOLDING



10 MAKE MITER CUTS WHERE NECESSARY

12. That's it! Enjoy this beautiful rack with your favorite beverage. Pair with other rack styles for an ultimate cellar storage look.

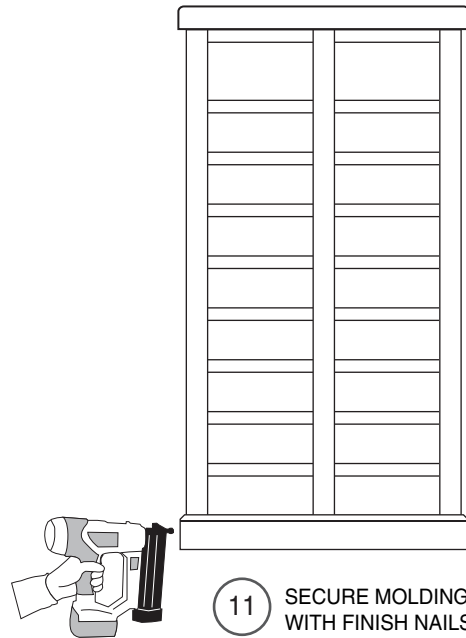

11 SECURE MOLDING WITH FINISH NAILS



WINE RACKS AMERICA

360 N 700 W suite F • North Salt Lake, UT 84054
(toll free) 888-373-6057
(fax) 801-936-0534

WineRacksAmerica.com

Thank you for your business. Remember, customer service is available to answer your questions M-F 7:00 am - 5:00 pm MST. Please feel free to contact us for any wine storage need.